TRADIESCHOICE CANOPY

Installation instruction

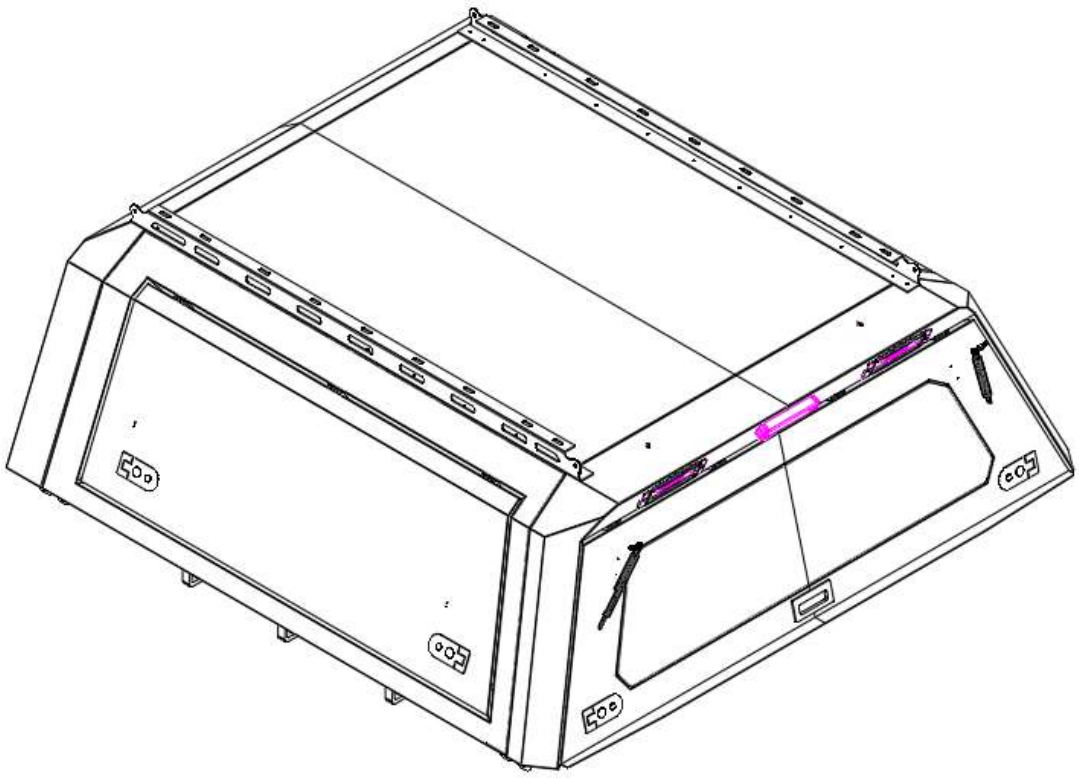

Read the instructions carefully to

avoid damage to parts or vehicles

Required accessories for assembly:

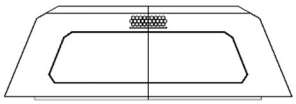

1x front door

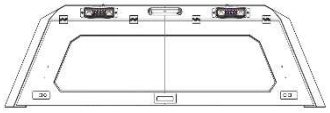

1x back door

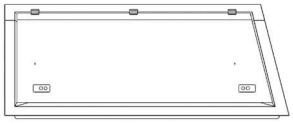

A pair of left and right doors

1x roof

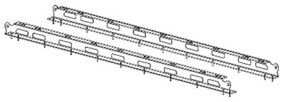

2xAttach the accessory on it

2x Special gaskets

3xSlotted LED light

Sponge strip

1x LED lights

sealing strip

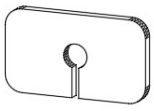

shim

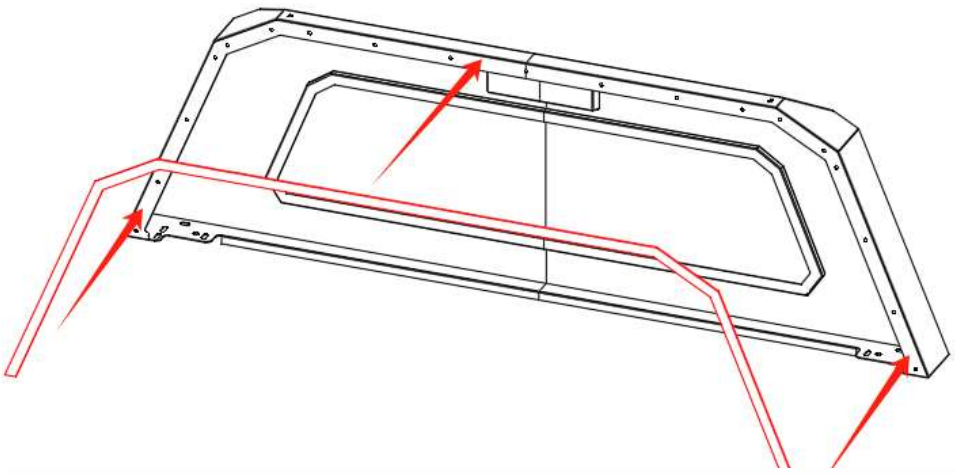

Sponge strips are attached to the screw holes of the front and rear doors

Attach a sponge strip to the connection between the top cover and the upper connecting fitting

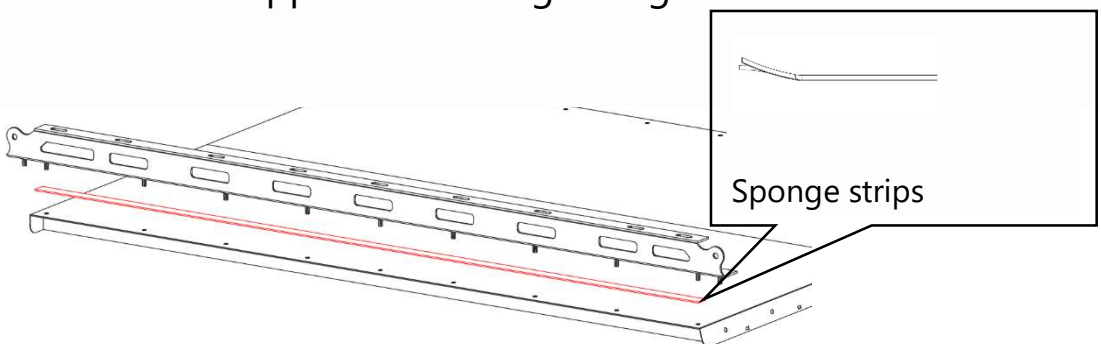

Start assembling the high cover: 1. Turn the front and rear doors, left and right side doors, and top cover over

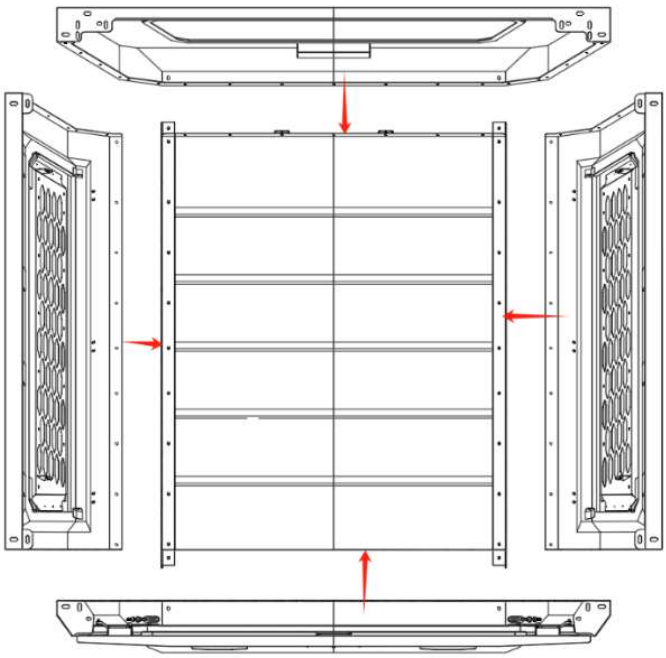

According to the front door, the top cover, the left and right side doors, and the back door are connected and fixed with screws in turn

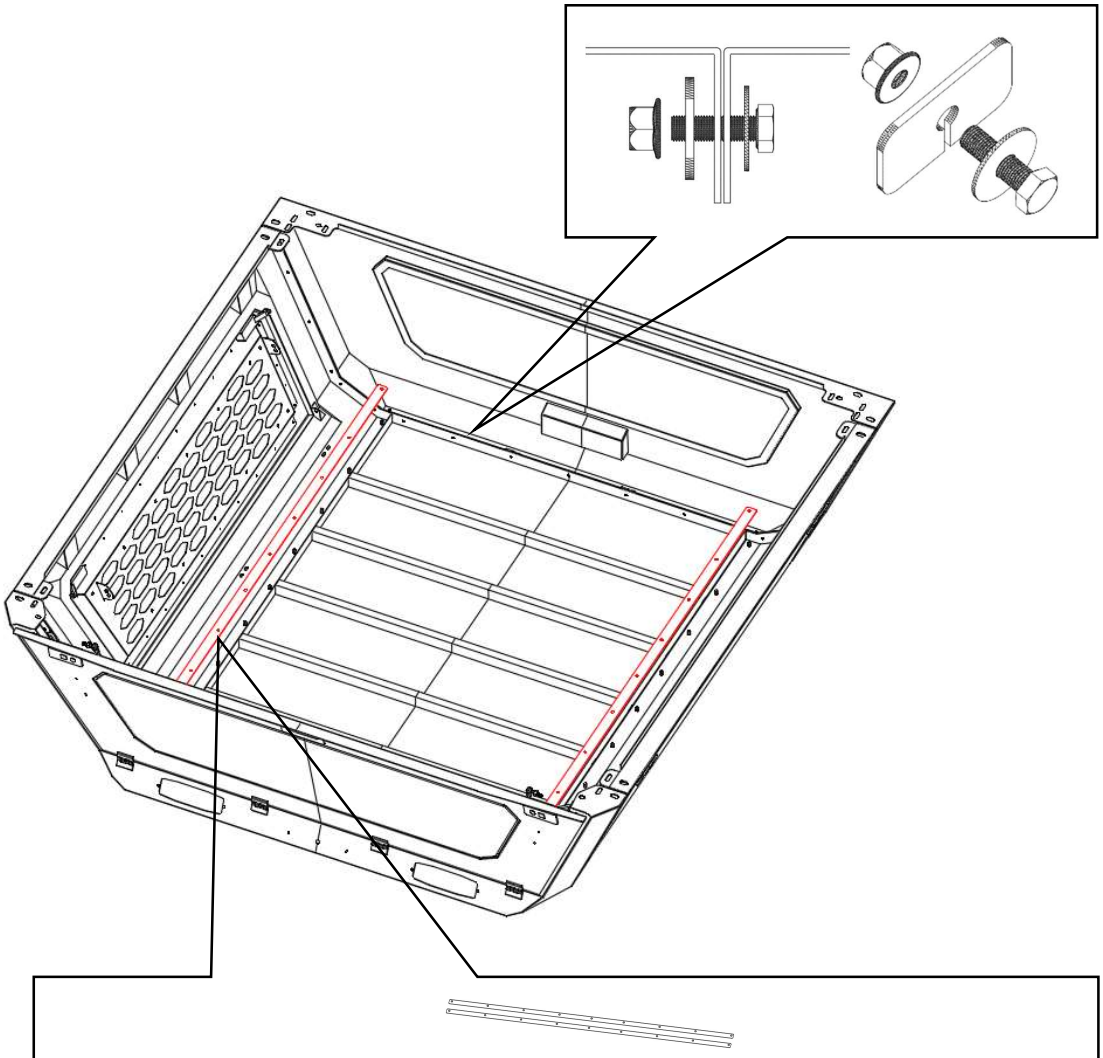

The left and right sides need to be put into the special gasket first, and then tighten the screws

Stick the sealing strip along the outer edge for one week to prevent water leakage

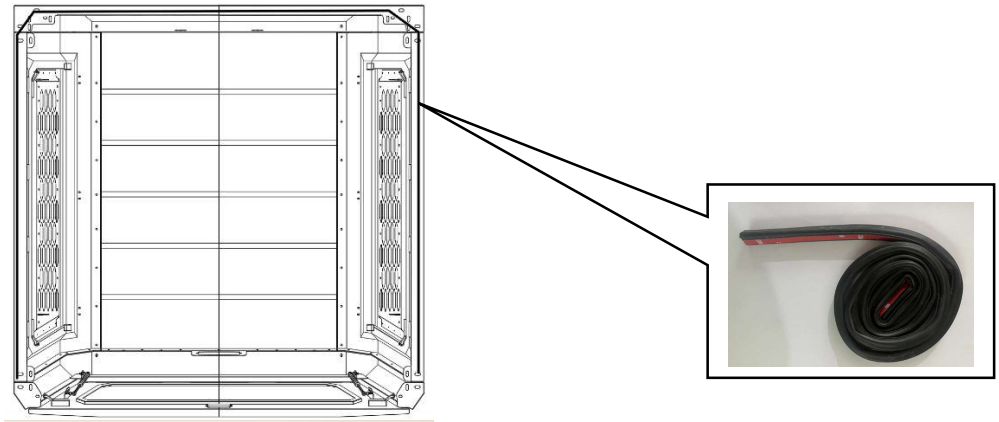

Place the high cover on the body and fix it with clips

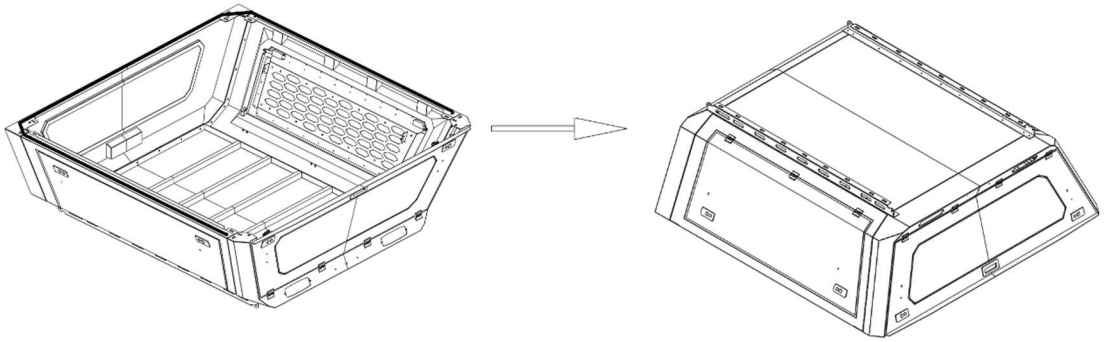

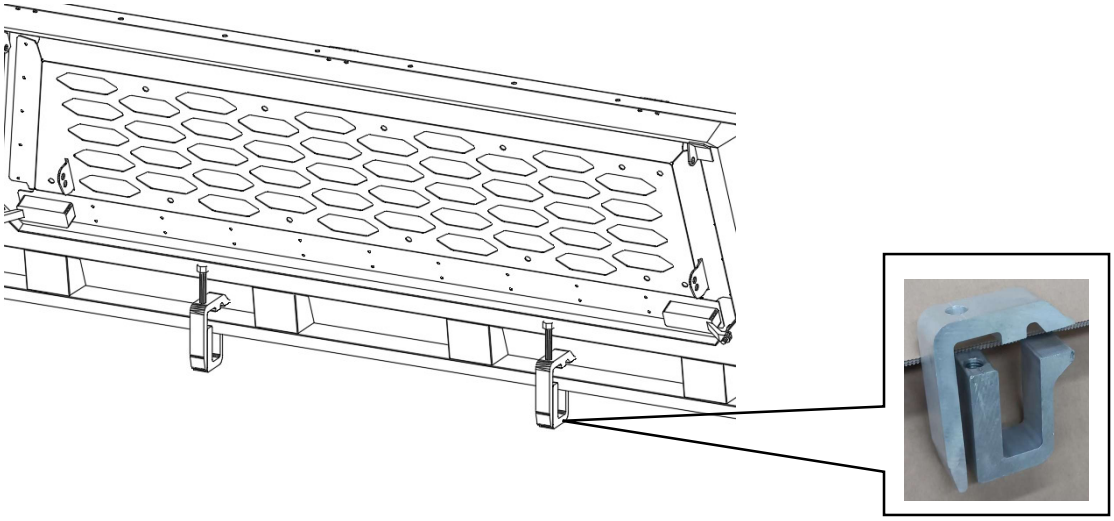

After assembly, use an applicator to apply sealant to the gaps

Rear door light installation

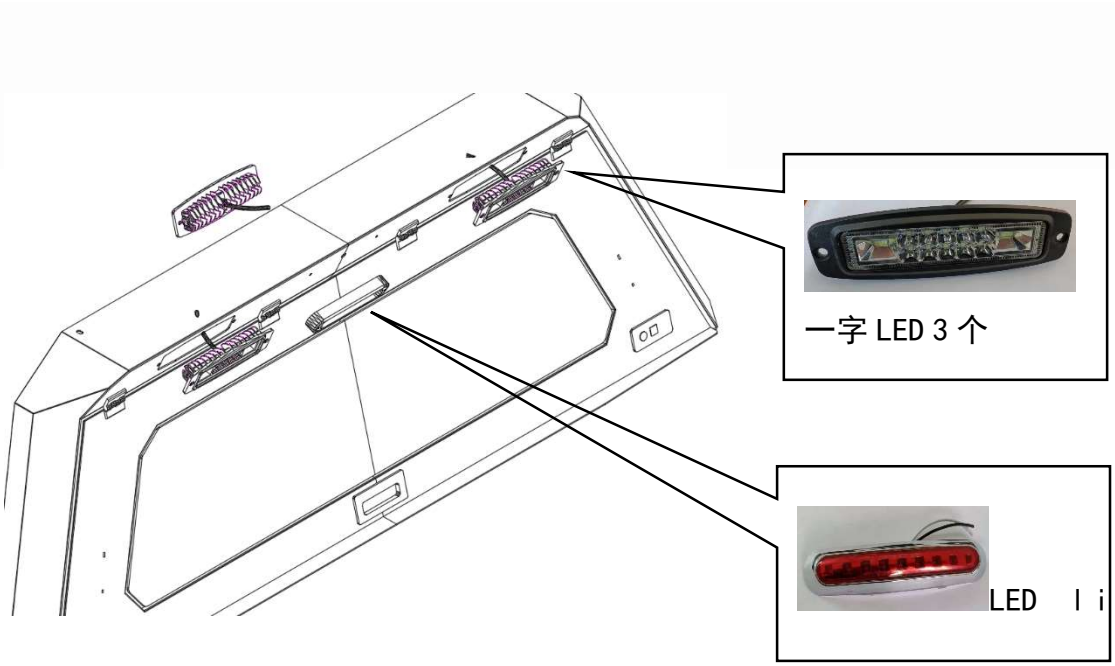
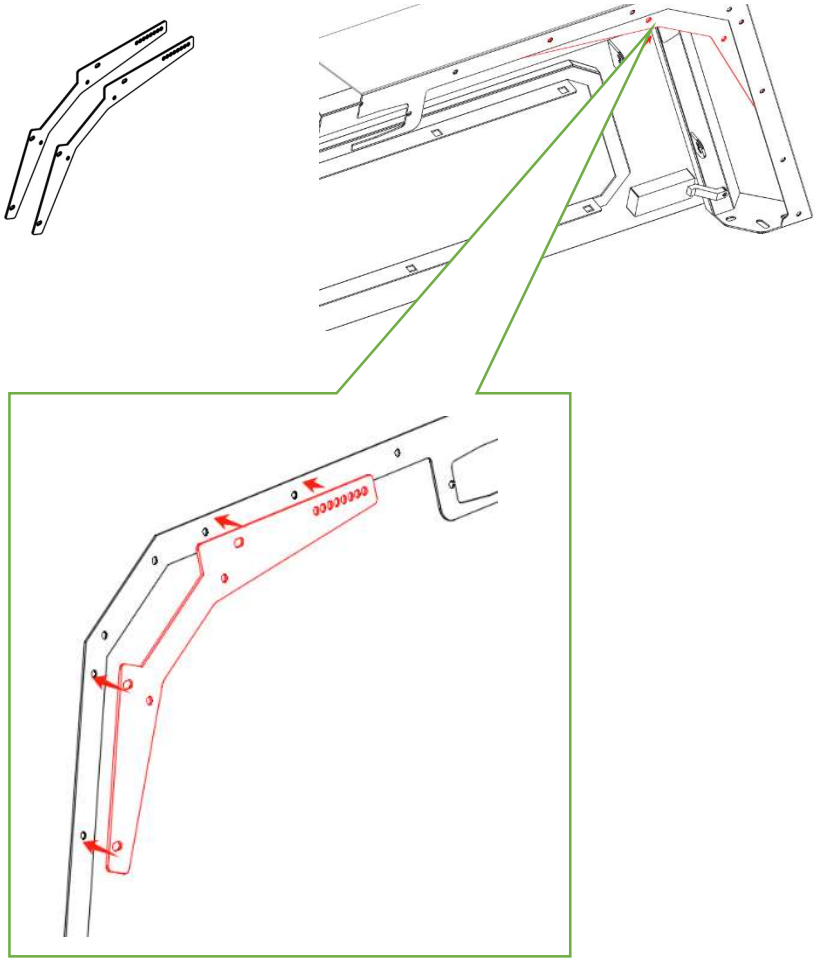
Finally, this accessory can be used to strengthen the rear door frame